

## HYDROCLEAN SERIES

# HC200

## SANITARY CONVEYORS

Durability meets cleanability with our stainless steel HC200 conveyors, designed for the food, beverage, and pharmacy industries.

The pull-pin design allows the conveyor to be quickly, easily and tool-lessly disassembled for cleaning, including high pressure washdown with chlorinated cleaners.

### FEATURES AND BENEFITS

#### BUILT TO BE CLEANED

Each HC200 conveyor features a pull-pin design that allows the user to release tension on the belt for under-belt cleaning, flip the stand brackets out of the way for quick belt removal, and remove the drive and tail ends of the conveyor for separate cleaning. No tools required.

#### NSF & BISSC CERTIFIED

HC200 conveyors have been independently inspected by both NSF and BISSC for their sanitary features like hex head fasteners and limited mated surfaces. The self-draining stainless steel frame features rounded edges to prevent standing water by promoting drainage.



#### CROWNED PULLEYS

Crowned pulleys are utilized to take advantage of the belt's natural tendency to run centered on the longest part of the conveyor.

#### V-GUIDED BELTS

V-guides and V-guided belts are standard on all HydroClean Series conveyors to ensure positive tracking, especially in wet environments.

FDA approved belting and plastic chain belting are also available for applications which require it.

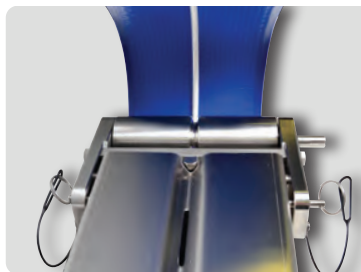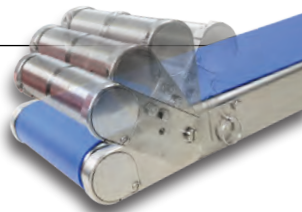

### APPLICATIONS

Food Processing

Brewery

Pharmacy & Medical

Packaging

Metal Working

HC200 | HydroClean Series



Width  
4-24"



Length  
up to 18'



Load  
up to  
120 lbs



Speed  
up to  
300 fpm



### CONFIGURE AND QUOTE ONLINE 24/7

Engineer developed rules make sure all your components work together properly.

Visit [qconveyors.com](http://qconveyors.com) for more information